

# User Manual

## Mars-S1000 Series

**Applicable Models: Mars-S1000/1011/1022/1200/1211/1222**

Date: September 2021

Doc Version: 1.1

English

Thank you for choosing our product. Please read the instructions carefully before operation. Follow these instructions to ensure that the product is functioning properly. The images shown in this manual are for illustrative purposes only.



For further details, please visit our Company's website  
[www.zkteco.com](http://www.zkteco.com).

Copyright © 2021 ZKTECO CO., LTD. All rights reserved.

Without the prior written consent of ZKTeco, no portion of this manual can be copied or forwarded in any way or form. All parts of this manual belong to ZKTeco and its subsidiaries (hereinafter the "Company" or "ZKTeco").

## Trademark

**ZKTeco** is a registered trademark of ZKTeco. Other trademarks involved in this manual are owned by their respective owners.

## Disclaimer

This manual contains information on the operation and maintenance of the ZKTeco equipment. The copyright in all the documents, drawings, etc. in relation to the ZKTeco supplied equipment vests in and is the property of ZKTeco. The contents hereof should not be used or shared by the receiver with any third party without express written permission of ZKTeco.

The contents of this manual must be read as a whole before starting the operation and maintenance of the supplied equipment. If any of the content(s) of the manual seems unclear or incomplete, please contact ZKTeco before starting the operation and maintenance of the said equipment.

It is an essential pre-requisite for the satisfactory operation and maintenance that the operating and maintenance personnel are fully familiar with the design and that the said personnel have received thorough training in operating and maintaining the machine/unit/equipment. It is further essential for the safe operation of the machine/unit/equipment that personnel has read, understood and followed the safety instructions contained in the manual.

In case of any conflict between terms and conditions of this manual and the contract specifications, drawings, instruction sheets or any other contract-related documents, the contract conditions/documents shall prevail. The contract specific conditions/documents shall apply in priority.

ZKTeco offers no warranty, guarantee or representation regarding the completeness of any information contained in this manual or any of the amendments made thereto. ZKTeco does not extend the warranty of any kind, including, without limitation, any warranty of design, merchantability or fitness for a particular purpose.

ZKTeco does not assume responsibility for any errors or omissions in the information or documents which are referenced by or linked to this manual. The entire risk as to the results and performance obtained from using the information is assumed by the user.

ZKTeco in no event shall be liable to the user or any third party for any incidental, consequential, indirect, special, or exemplary damages, including, without limitation, loss of business, loss of profits, business interruption, loss of business information or any pecuniary loss, arising out of, in connection with, or

relating to the use of the information contained in or referenced by this manual, even if ZKTeco has been advised of the possibility of such damages.

This manual and the information contained therein may include technical, other inaccuracies or typographical errors. ZKTeco periodically changes the information herein which will be incorporated into new additions/amendments to the manual. ZKTeco reserves the right to add, delete, amend or modify the information contained in the manual from time to time in the form of circulars, letters, notes, etc. for better operation and safety of the machine/unit/equipment. The said additions or amendments are meant for improvement /better operations of the machine/unit/equipment and such amendments shall not give any right to claim any compensation or damages under any circumstances.

ZKTeco shall in no way be responsible (i) in case the machine/unit/equipment malfunctions due to any non-compliance of the instructions contained in this manual (ii) in case of operation of the machine/unit/equipment beyond the rate limits (iii) in case of operation of the machine and equipment in conditions different from the prescribed conditions of the manual.

The product will be updated from time to time without prior notice. The latest operation procedures and relevant documents are available on <http://www.zkteco.com>

If there is any issue related to the product, please contact us.

## ZKTeco Headquarters

**Address** ZKTeco Industrial Park, No. 32, Industrial Road,  
Tangxia Town, Dongguan, China.

**Phone** +86 769 - 82109991

**Fax** +86 755 - 89602394

For business-related queries, please write to us at: [sales@zkteco.com](mailto:sales@zkteco.com).

To know more about our global branches, visit [www.zkteco.com](http://www.zkteco.com).

## About the Company

ZKTeco is one of the world's largest manufacturer of RFID and Biometric (Fingerprint, Facial, Finger-vein) readers. Product offerings include Access Control readers and panels, Near & Far-range Facial Recognition Cameras, Elevator/floor access controllers, Turnstiles, License Plate Recognition (LPR) gate controllers and Consumer products including battery-operated fingerprint and face-reader Door Locks. Our security solutions are multi-lingual and localized in over 18 different languages. At the ZKTeco state-of-the-art 700,000 square foot ISO9001-certified manufacturing facility, we control manufacturing, product design, component assembly, and logistics/shipping, all under one roof.

The founders of ZKTeco have been determined for independent research and development of biometric verification procedures and the productization of biometric verification SDK, which was initially widely applied in PC security and identity authentication fields. With the continuous enhancement of the development and plenty of market applications, the team has gradually constructed an identity authentication ecosystem and smart security ecosystem, which are based on biometric verification techniques. With years of experience in the industrialization of biometric verifications, ZKTeco was officially established in 2007 and now has been one of the globally leading enterprises in the biometric verification industry owning various patents and being selected as the National High-tech Enterprise for 6 consecutive years. Its products are protected by intellectual property rights.

## About the Manual

This manual introduces the operations of **Mars-S1000 Series**.

All figures displayed are for illustration purposes only. Figures in this manual may not be exactly consistent with the actual products.

Features and parameters with ★ are not available in all devices.






## Document Conventions

Conventions used in this manual are listed below:

### GUI Conventions

| For Software     |  |
|------------------|--|
| Convention       | Description  |
| <b>Bold font</b> | Used to identify software interface names e.g. <b>OK</b> , <b>Confirm</b> , <b>Cancel</b> .                                  |
| >                | Multi-level menus are separated by these brackets. For example, File > Create > Folder.                                      |
| For Device       |  |
| Convention       | Description  |
| < >              | Button or key names for devices. For example, press <OK>.  |
| [ ]              | Window names, menu items, data table, and field names are inside square brackets. For example, pop up the [New User] window. |
| /                | Multi-level menus are separated by forwarding slashes. For example, [File/Create/Folder].                                    |

### Symbols


| Convention  | Description  |
|---|--|
|  | This represents a note that needs to pay more attention to.                            |
|  | The general information which helps in performing the operations faster.               |
|  | The information which is significant.  |
|  | Care taken to avoid danger or mistakes.  |
|  | The statement or event that warns of something or that serves as a cautionary example. |

## Table of Contents

|          |                                      |           |
|----------|--------------------------------------|-----------|
| <b>1</b> | <b>OVERVIEW.....</b>                 | <b>6</b>  |
| 1.1      | CHASSIS DESIGN AND DIMENSIONS.....   | 6         |
| 1.2      | MECHANICAL SYSTEM.....               | 7         |
| 1.3      | ELECTRONIC CONTROL SYSTEM.....       | 7         |
| 1.4      | WORKING PRINCIPLE.....               | 8         |
| 1.5      | SYSTEM COMPOSITION.....              | 8         |
| 1.6      | TECHNICAL SPECIFICATIONS.....        | 9         |
| 1.7      | ANTI-COLLISION FORCE PARAMETERS..... | 10        |
| <b>2</b> | <b>FUNCTION INTRODUCTION .....</b>   | <b>11</b> |
| 2.1      | FINGERPRINT VERIFICATION.....        | 11        |
| 2.2      | CARD VERIFICATION.....               | 12        |
| 2.3      | QR CODE VERIFICATION .....           | 13        |
| 2.4      | FACIAL VERIFICATION★ .....           | 14        |
| 2.5      | WIRELESS REMOTE CONTROL★ .....       | 16        |
| <b>3</b> | <b>MENU INTRODUCTION .....</b>       | <b>17</b> |
| <b>4</b> | <b>WIRING DIAGRAM .....</b>          | <b>26</b> |
| <b>5</b> | <b>PACKING LIST .....</b>            | <b>27</b> |
| <b>6</b> | <b>MAINTENANCE .....</b>             | <b>28</b> |
| 6.1      | CHASSIS MAINTENANCE.....             | 28        |
| 6.2      | MOVEMENT MAINTENANCE.....            | 28        |
| 6.3      | POWER SUPPLY MAINTENANCE .....       | 28        |
| <b>7</b> | <b>TROUBLESHOOTING.....</b>          | <b>29</b> |

## 1 Overview


The Mars-S1000 Series swing barrier turnstile is an elegant cost-effective entrance control system designed for high-traffic volume. The Mars-S1000 Series barriers are normally held in a locked position, thus denying access to the secured side. When the Mars-S1000 Series correctly identifies the user's Card (RFID)/Fingerprint/QR code, etc. to verify the identity, its barriers swing automatically, thus allowing users passage to the secured side.

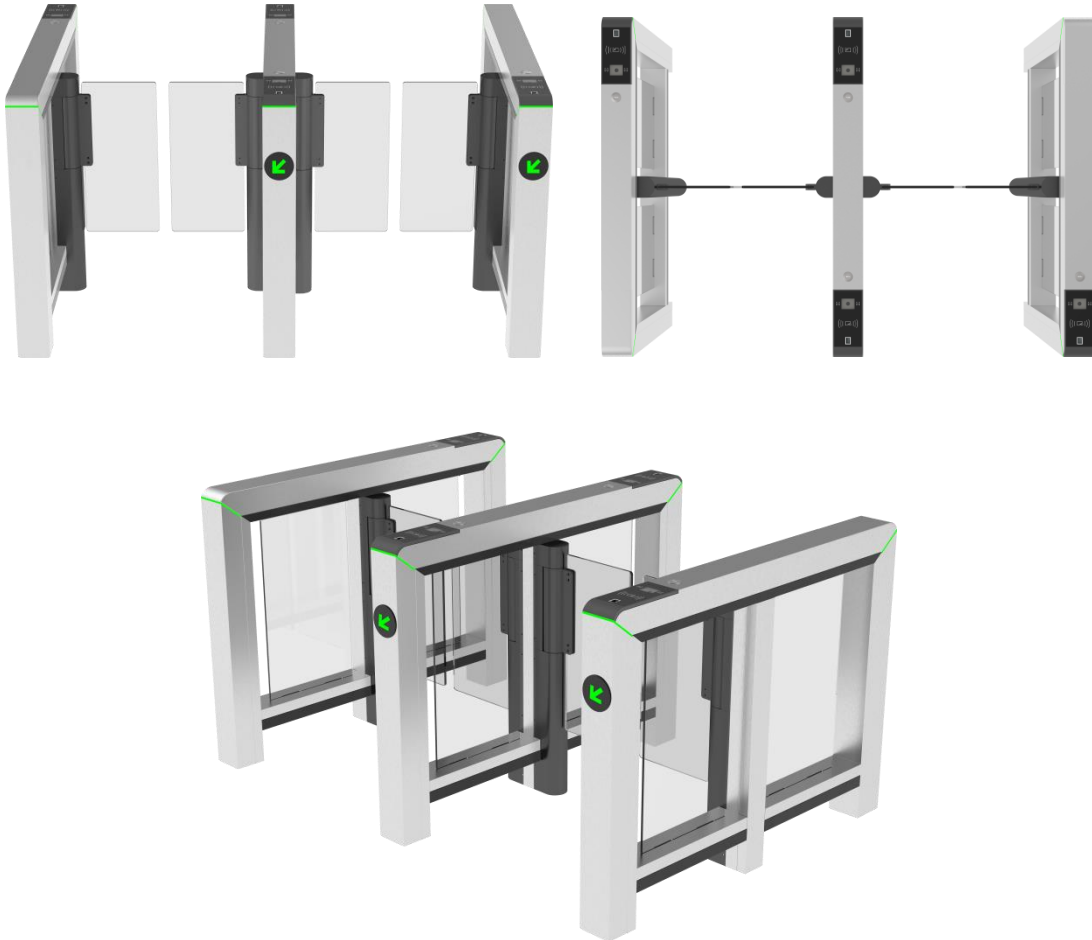

### 1.1 Chassis Design and Dimensions

The device has a stainless steel (Mars series) and cold rolled steel with coating (Mars Pro series) stamp form that makes it anti-rust and durable. The Acrylic panel provides simple and beautiful design with corrosion protection. It provides orderly and civilized passage to the persons and restricts illegal personnel access. In case of emergencies, it ensures that evacuation passage runs smoothly and is convenient for personnel.

Mars-S1000's appearance and dimensions are shown below:

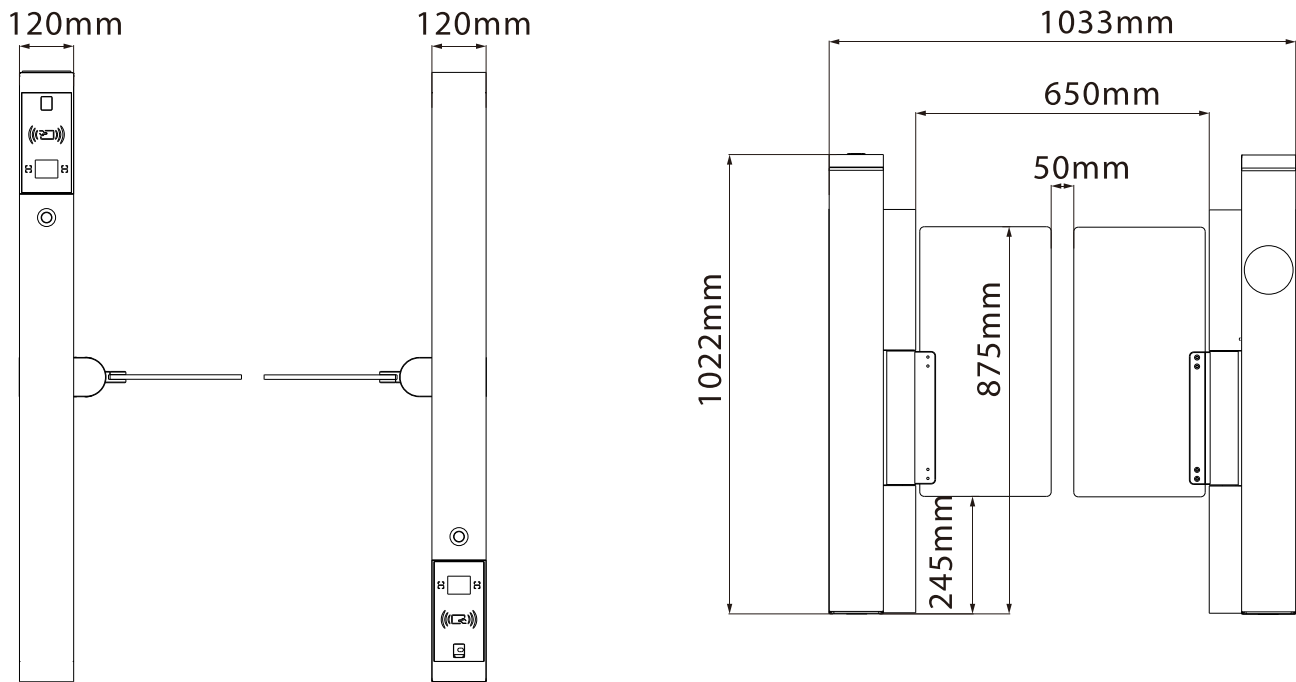

## 1.2 Mechanical System

The mechanical system of the swing barrier turnstile includes the chassis and the core component. The chassis is a carrier where the Direction indicator, Reader, QR code scanner, Fingerprint sensor, Infrared sensor, and the Door lock are installed. The core component mainly consists of the Motor, Frame, Bearing, and swing Arm.

## 1.3 Electronic Control System

The electronic control system of a swing barrier turnstile is mainly composed of the Card Reader/Fingerprint sensor/QR code, Turnstile control board, Infrared Sensor, Direction Indicator and Alarm.

**Reader:** The reader reads the data in the card and sends it to the Access Controller.

**Fingerprint sensor:** The device compares the fingerprint that is being pressed onto the fingerprint sensor with all the fingerprint data and sends it to the Access Controller.

**QR code sensor:** The sensor compares the acquired QR code with all QR code data registered in the device and sends it to the Access Controller.

**Turnstile control board:** The turnstile control board is the system's control center that receives signals from the reader and the photoelectric switch performs logical calculation and processing of



these signals and sends executive commands to the Direction indicator, electric motor and the alarm.

**Infrared Sensor:** It detects the position of the pedestrian and plays the role of safety protection.

**Direction Indicator:** This indicator displays the pedestrian passage path and directs them to pass through the lane in a safe and orderly manner.

**Alarm:** The alarm gives an alarm voice if the system detects any unauthorized entry to the passage.

## 1.4 Working Principle

1. After powering on to the device, the system performs the Power-On Self-Test.
2. When a valid Card/Fingerprint/QR code is detected, the buzzer will give a positive audible prompt to the pedestrian, indicating that successfully verified. And then, the reader sends signals to the Access Controller to request permission to pass through the passage. The Access Controller will send the signal to the master control panel.
3. After receiving the signal from the Access Controller, the turnstile control board sends valid control signals to the direction indicator and the electric motor. At last the direction arrow turns green.
4. Pedestrians passes through the passage according to the direction indicator signs. Infrared sensors keep on detecting the pedestrian during the whole process, and continue to send signal to the master control board until the pedestrian passes completely through the passage.
5. If the pedestrian enters the passage but forgets to verify identification, or if the card held/fingerprint/QR code by the pedestrian is invalid, the system will prompt an audible alarm to stop and retreat the pedestrian from the passage. The pedestrian can pass through the passage only after a valid card/fingerprint/QR code is successfully verified.

## 1.5 System Composition

The single-lane management system is composed of two single-core swing barriers. The multi-lane management system is composed of two single-core barriers and multiple dual-core barriers.

### Working modes of the system

To make the product more versatile, this system provides multiple working modes for the user, including Normal working mode, Normally open mode, Normally close mode and Testing mode.

**Normal Working Mode:** In this working mode, the turnstile works normally.

**Normal Open Mode:** In this working mode, the turnstile is always open.

**Normal Close Mode:** In this working mode, the turnstile is always closed.


**Testing Mode:** In this working mode, the turnstile performs auto-test.

## 1.6 Technical Specifications

| Feature                      | Specification  |
|------------------------------|--|
| Communication                | TCP/IP, RS485, 4G/WIFI                               |
| Input Voltage                | AC110V to 220V, 50 Hz to 60Hz                        |
| Input Control Signal         | Switching Signal                                     |
| Output Voltage               | DC 24V   |
| Protection Level             | IP34   |
| Time of Gate Opening/Closing | Minimum 0.6 Seconds                                  |
| Relative Humidity            | <95% (Non-condensing)                                |
| Temperature                  | -25°C to 65°C (Standard)<br>-40°C to 80°C (Optional) |
| Throughput Rate              | Maximum 35 persons/minute                            |
| Motor                        | Brushless Motor                                      |
| Infrared Sensors             | 8 Pairs  |
| Working Environment          | Indoor/Outdoor (if sheltered)                        |
| Dimension(mm) (L*W*H)        | 1355* 120*1022                                       |
| Noise                        | <60dB  |
| Certifications               | CE and FCC   |

## 1.7 Anti-collision Force Parameters

The swing arm can withstand shaking of 400N.

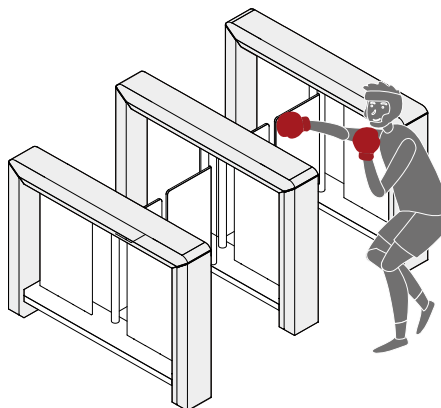


 The picture only shows the anti-collision level, please do not damage the device.

## 2 Function Introduction


### 2.1 Fingerprint Verification

In this verification mode, the device compares the fingerprint that is being pressed onto the fingerprint reader with all the fingerprint data sends it to the Access Controller.



The device enters the fingerprint authentication mode when a user presses his/her finger onto the fingerprint scanner.

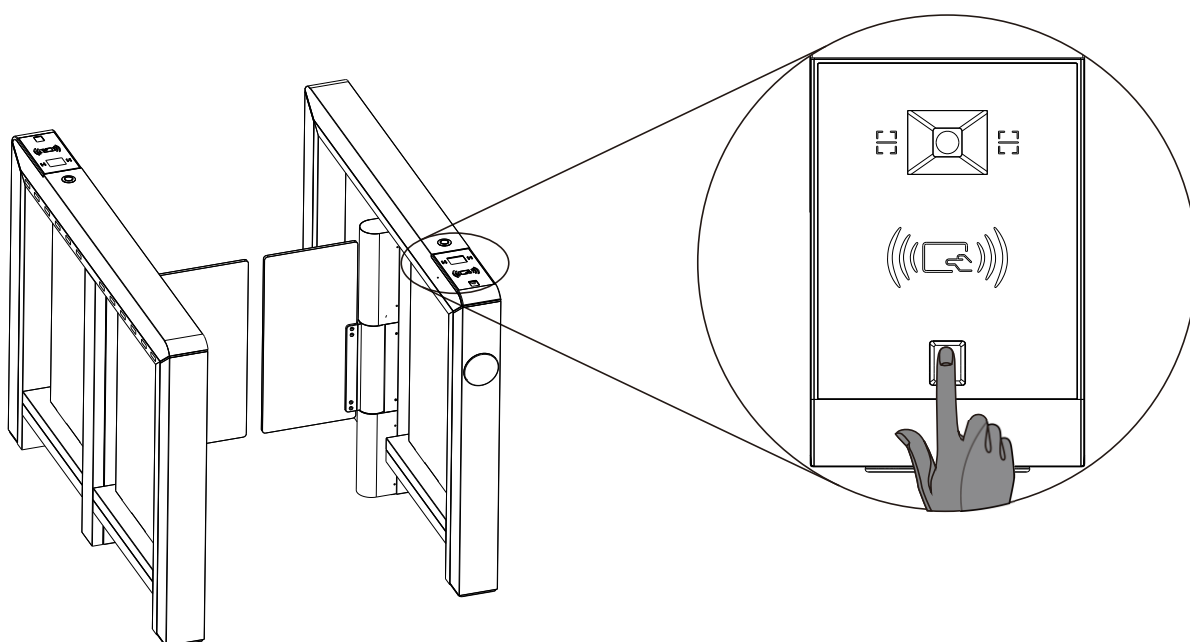

**Recommended fingers:** It is recommended to use index, middle, or ring finger for registration and avoid using the thumb or little finger, as they are difficult to accurately press onto the fingerprint reader.

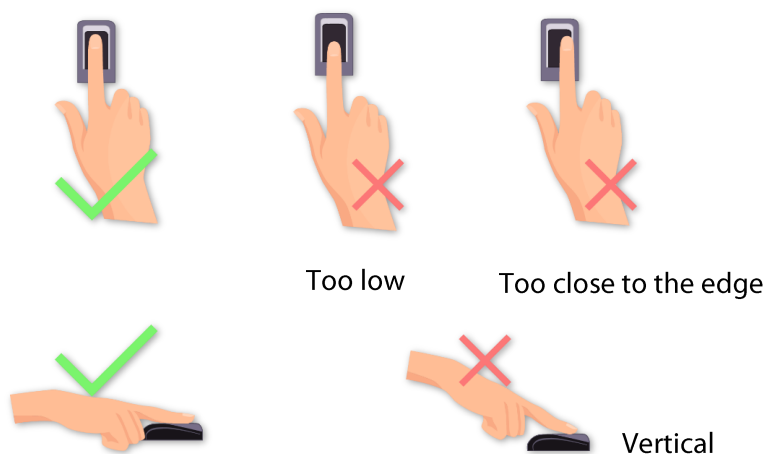


**Note:** Please use the correct method when pressing your fingers onto the fingerprint reader for registration and identification. Our company will assume no liability for recognition issues that may result from incorrect usage of the product. We reserve the right of final interpretation and modification concerning this point.

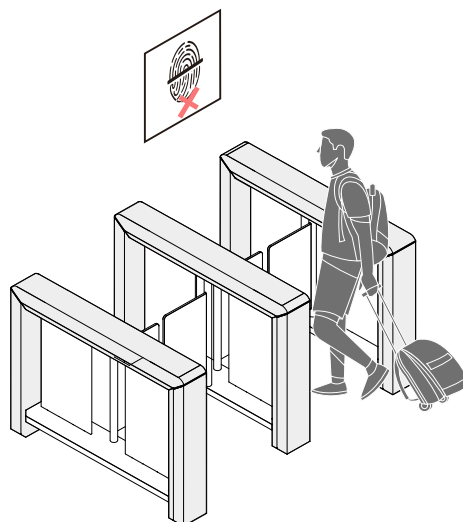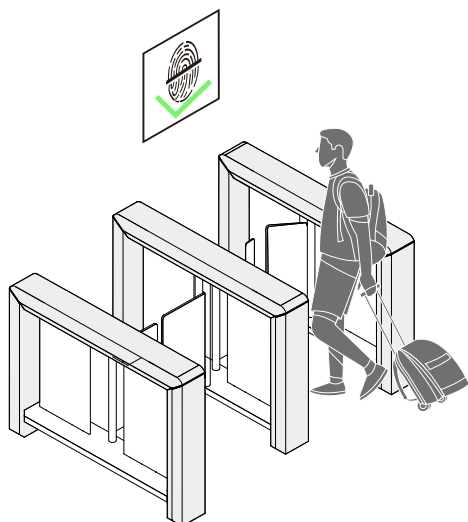


## 2.2 Card Verification

The Card Verification mode compares the card number in the card induction area with all the card number data registered in the device and sends it to the Access Controller.

The device enters the card authentication mode when a user presses his/her card to the card reading area.

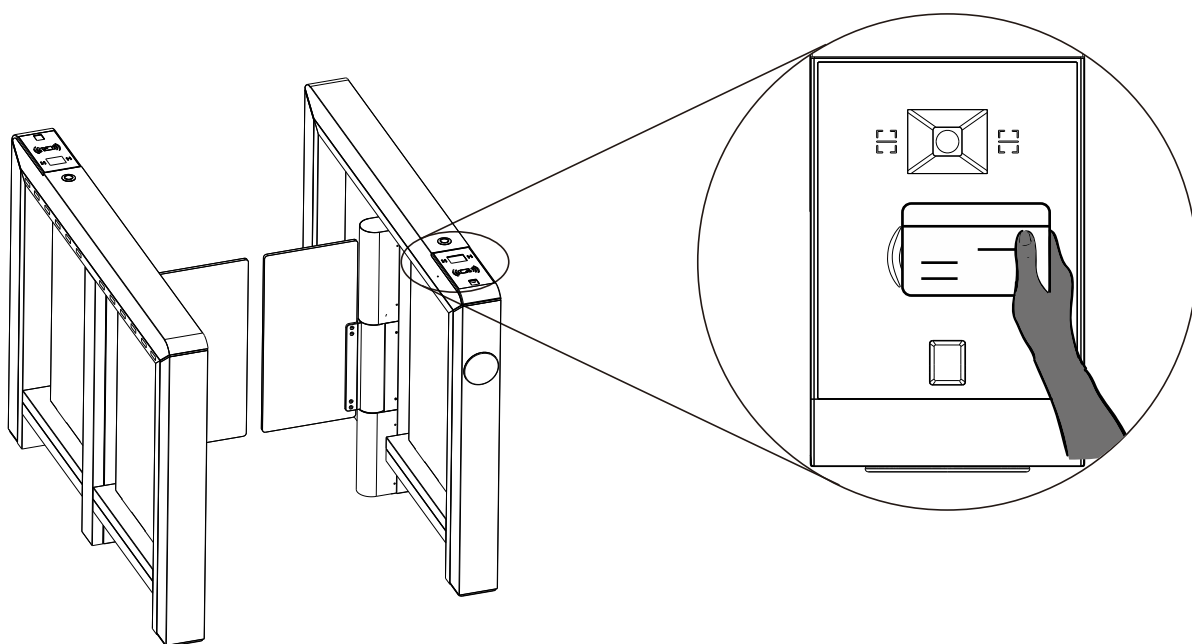



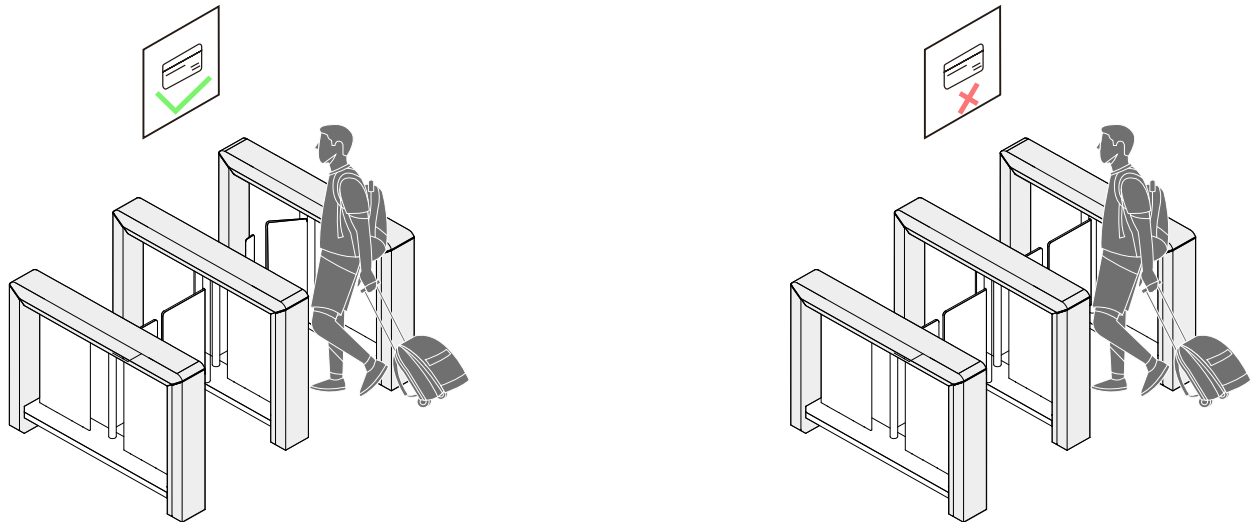


## 2.3 QR code Verification

The QR code Verification mode is to scan the QR code on the user's mobile phone through the QR code scanner and compare the data with the registered QR code, and then sends it to the Access Controller.

When the user places the mobile phone displaying with the QR code on top of the QR code scanner, the device enters the QR code authentication mode.

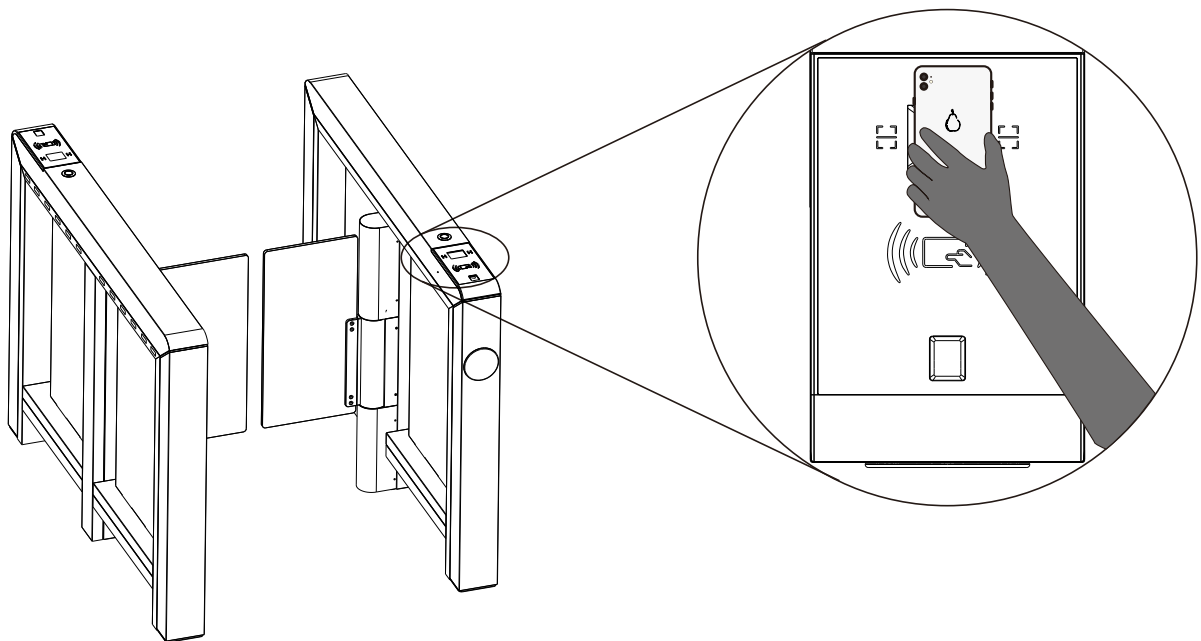

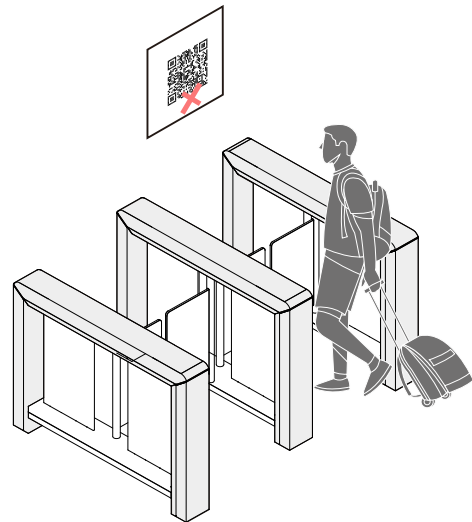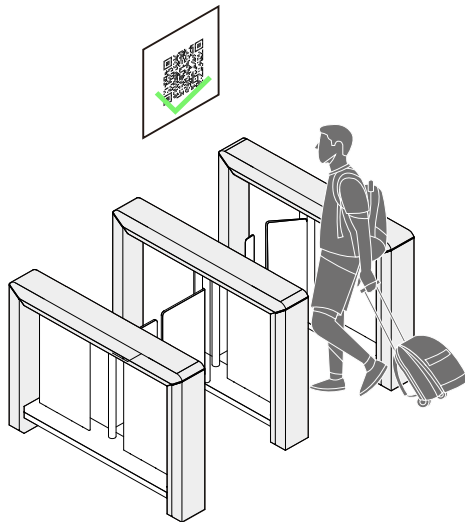

## 2.4 Facial Verification★


In this verification mode, the device compares the collected facial images with all face data registered in the device and then sends it to the Access Controller.

Try to keep the face in the centre of the screen during authentication. Please face towards the camera and stay still during face registration.

Recommended Standing Posture and Facial Expression:




**Note:** Please keep your facial expression and standing posture natural while enrollment or verification.

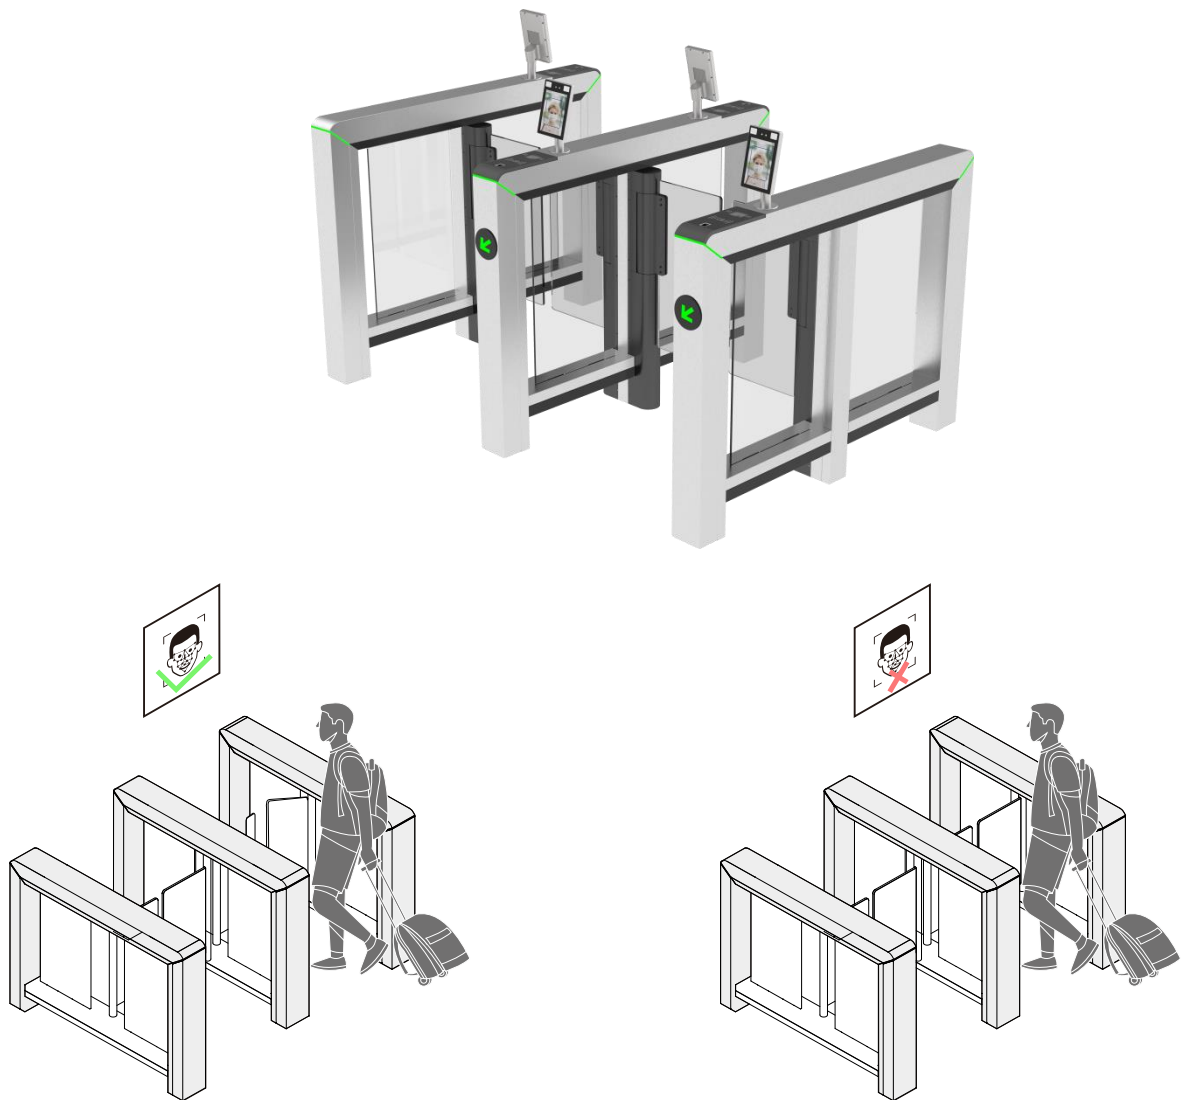**Installation on the barrier gate:**


1. Please pass the wire through the bracket before installation.
2. Insert the bracket into the hole and fix it with a nut.
3. Adjust the angle of the device.



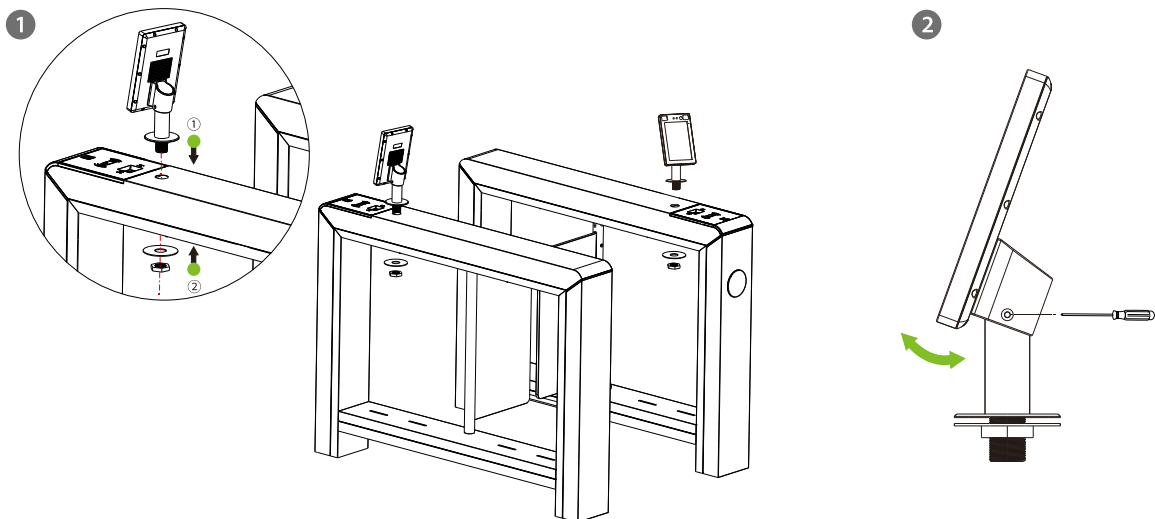

## 2.5 Wireless Remote Control★

The wireless remote control of swing barrier turnstile is an intelligent device that remote controls the entrance and exit. It is designed for manual control of the swing barrier turnstile by the administrator. The wireless remote control has four buttons A, B, C, and D, corresponding to the options open entrance gate, open exit gate, emergency mode open-bar pass, and alarm lock.

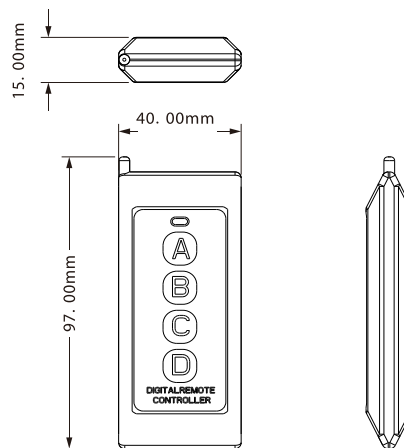

| Buttons | Description  |
|---------|--|
| A       | Press the button once to open the swing barrier turnstile on the entrance and can pass by verification from the entrance.  |
| B       | Press the button once to open the swing barrier turnstile on the exit and can pass by verification from the exit.  |
| C       | In emergency mode, press the button once to open the gate. Then the entrance and exit sides gate open and can pass freely without verification.                                    |
| D       | Press the button once to close the gate. Then the entrance and exit sides are controlled by the swing barrier turnstile. The verification becomes invalid, and no pass is allowed. |

### 3 Menu Introduction


There are 4 keys on the control panel, "MENU", "MODE", "ADD" and "DEC".

**MENU:** It is used for enter the Settings menu and to confirm the current modified value.

**MODE:** It is used to go back to the previous menu and discard the current operation.

**ADD:** It is used for navigating to the upper menu item and increasing the value.

**DEC:** It is used for navigating to the lower menu item and decreasing the value.

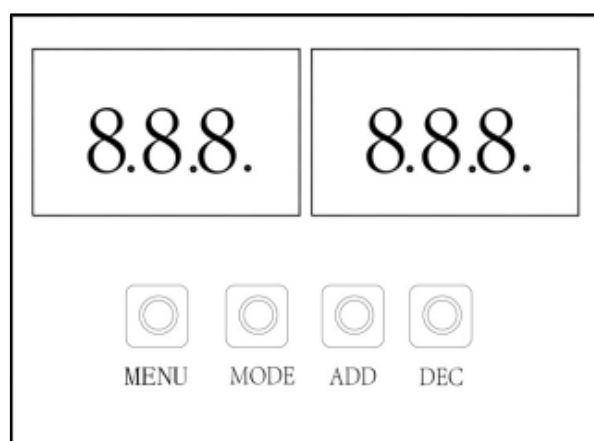


#### Display Mode (01EXXX)


- (01E000) Displays current position of the gate. (Default)
- (01E001) Infrared input signal.
- (01E002) Controls input signal.
- (01E003) Test mode (the digital LED displays "---" in the test mode).
- (01E004) Version number.

#### Access Mode Setting (02EXXX)


Two-way control (Default)

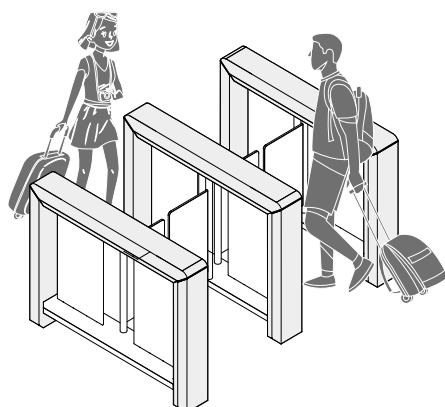


In control, out free

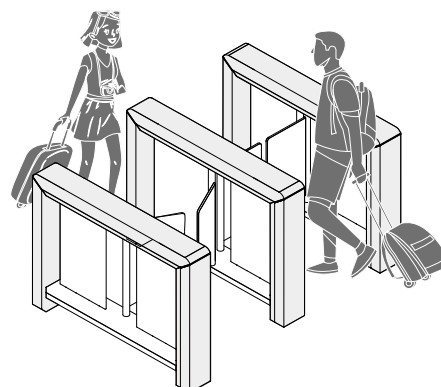


In free, out control

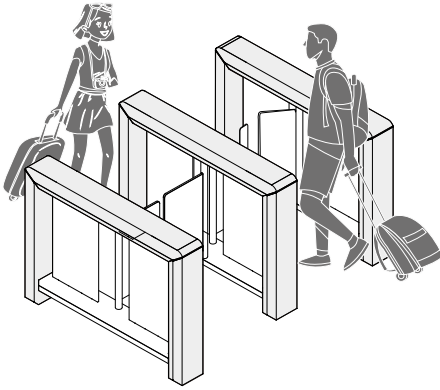


Two-way free

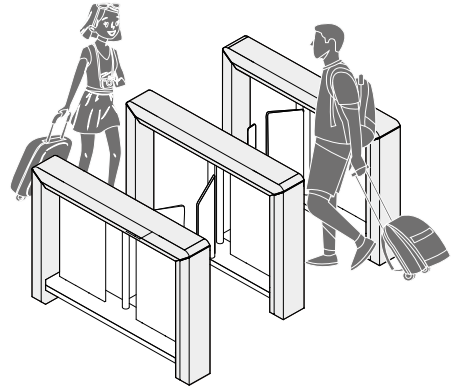


In control, out forbidden

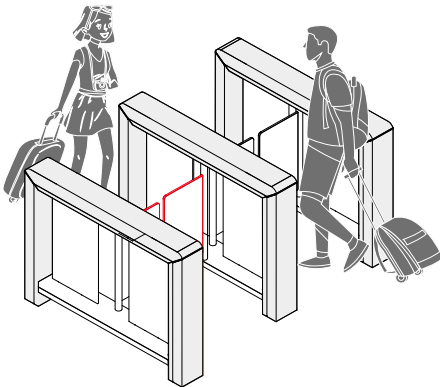


In forbidden, out control

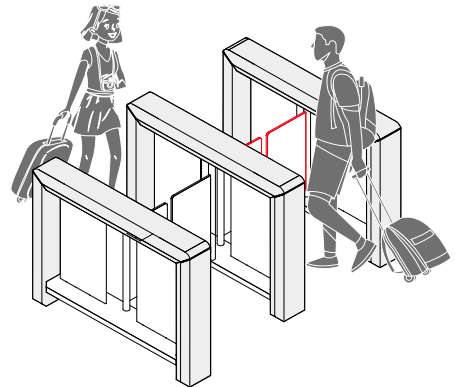


In free, out forbidden

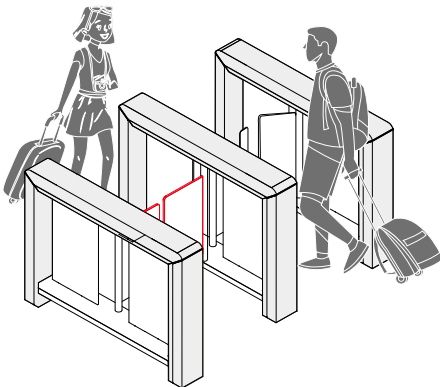


In forbidden, out free

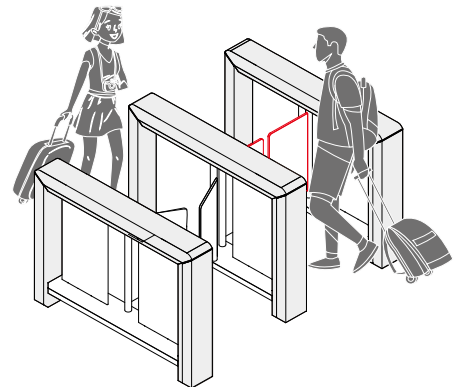

Two-way forbidden

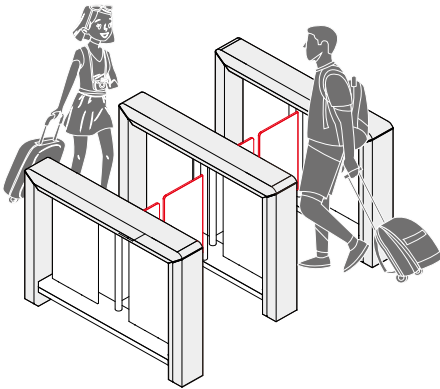

Two-way normally open

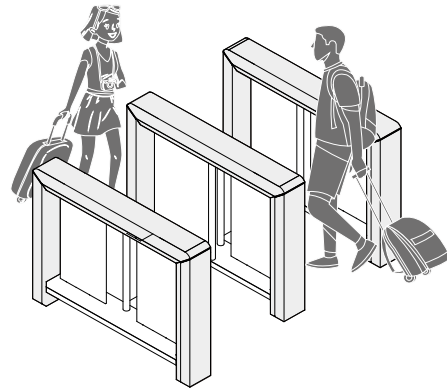**Opening Speed (03EXXX)**

Set the Opening Speed to open the gate. The larger the number is set, the faster the speed. The Opening Speed value can be set between 5 to 30 seconds and the default value is 22s.

**Opening Brake Stroke (04EXXX)**

The larger the number is set, the larger the deceleration stroke. The Opening Brake Stroke value can be set between 0 to 50 seconds and the default value is 15.

**Opening Compensation Speed (05EXXX)**

It can be set when the swing arm cannot open to the limit or shakes. The larger the number is set, the faster of the compensation speed. The Gate Opening compensation Speed value can be set between 0 to 50s and the default value is 20s.

**Closing Speed (06EXXX)**

Set the Closing Speed to close the gate. The larger the number is set, the faster the speed. The Closing Speed value can be set between 5 to 30 seconds and the default value is 22s.

**Closing Brake Stroke (07EXXX)**

The larger the number is set, the larger the deceleration stroke. The Closing Brake Stroke value can be set between 0 to 50 seconds and the default value is 15.

**Closing Compensation Speed (08EXXX)**

It can be set when the swing arm cannot close to the zero position or shakes. The larger the number is set, the faster of the compensation speed. The Gate Closing compensation Speed value can be set between 0 to 50s and the default value is 20s.

**Master/Slave Turnstile Setting (09EXXX)**


- (09E000) Master turnstile
- (09E001) Slave turnstile (Default)

**RS485 Address (10EXXX)**


It can be set between 0 to 254 and the default value is 0.

**Automatic Closing Time for Unmanned Passage (11EXXX)**

Verify that no one passes after the switch is opened. After arriving at the set time, the switch will shut down automatically. The valid value for Automatic Closing Time for Unmanned Passage can be set between 2 to 60s and the default value is 5s.

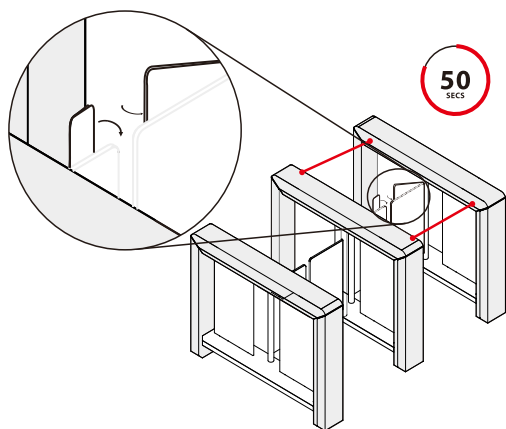**Closing Delay after Passing (12EXXX)**

Set the delay time of gate closing after passing. The valid value for Gate Closing Delay Time can be set between 0 to 60s and the default value is 0s.

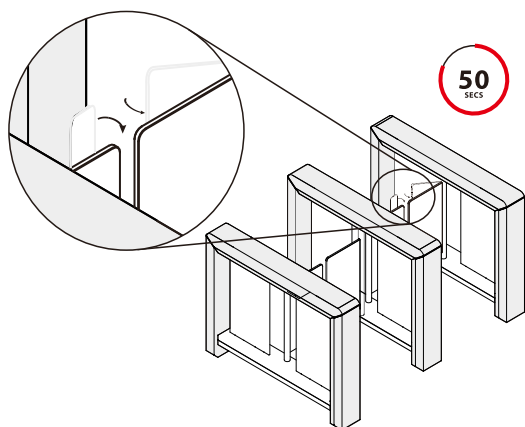**Position Adjustment (13EXXX)**


- (13E001) Open in place master turnstile adjustment
- (13E002) Close in place master turnstile adjustment
- (13E003) Slave turnstile in place

The corresponding position can only be adjusted when it is in place.

### **Memory Function (14EXXX)**

- (14E001) Close memory function (Default)
- (14E002) Open memory function


When more than two legal access signals are given at the same time (including the same direction and the opposite direction), the system will remember all the pass requests and complete each pass in turn.

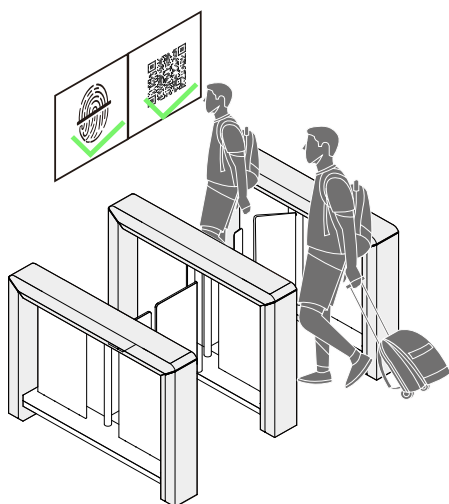


### **Verification Mode (15EXXX)**

The verification mode can be set as Allow to verify in channel, or Forbid to verify in channel.

Allow to verify in channel (Default)

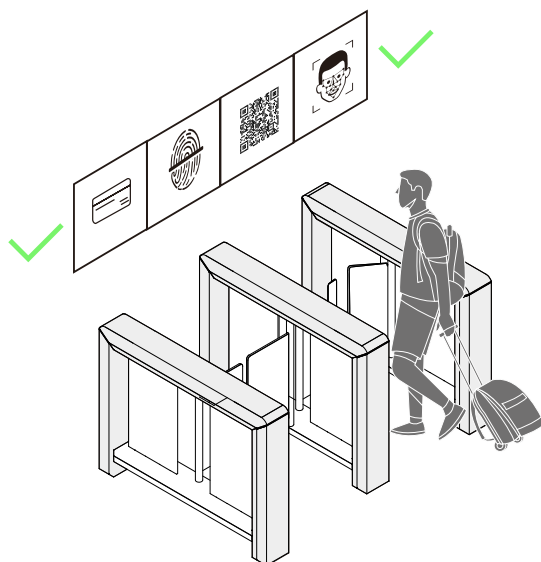

Forbid to verify in channel

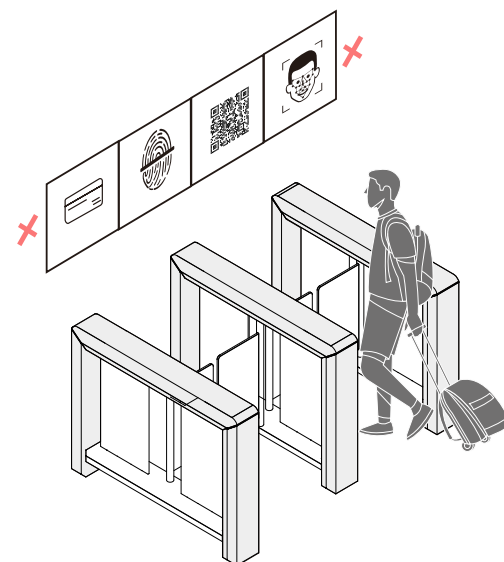

### **Voice Volume Adjustment (16EXXX)**

Adjust the volume of the device, the larger the number is set, the louder the volume. The valid value for Volume Setting can be set between 1 to 100 and the default value is 70.

**Close Alarm Sound (17EXXX)**

- (17E001) Close
- (17E002) Open (Default)

When the alarm sound is turned off, the Turnstile will not emit an alarm sound when encountering an alarm situation.


**Exchange Entrance and Exit Voice (18EXXX)**

- (18E000) Right in, left out (Default)
- (18E001) Right out, left in

Ordinary alarm sounds do not need to be exchanged.

**Stay Duration Time (19EXXX)**


Set the duration of stay in the channel after successful verification, the valid value for Stay Duration Time can be set between 5 to 30s and the default value is 10s.

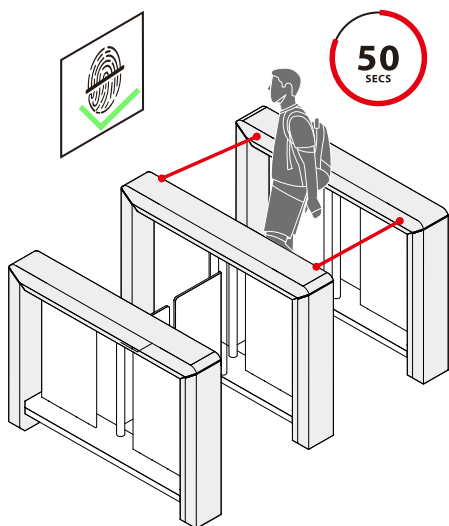**Force adjustment (20EXXX)**

The larger the number, the greater the efficiency of the gate opening and closing force. The valid value for Force Adjustment can be set between 10 to 60 and the default value is 40.

**Fire Mode (21EXXX)**

- (21E000) Entry opening (Default)
- (21E001) Exit opening

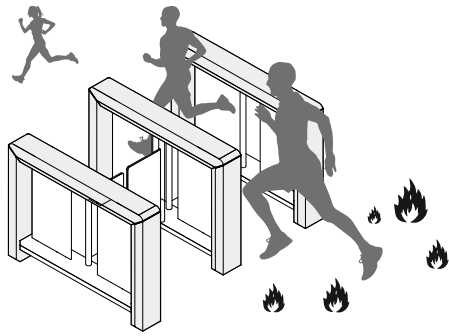

### **Clutch Start Angle (22EXXX)**


Set the angle at which the clutch starts. The larger the number, the bigger the angle. The valid value for Clutch Start Angle can be set between 0 to 99, and the default value is 0.

**Note:** Private setting is invalid.

### **Clutch AlarmSetting (23EXXX)**

- (23E000) Delay unlocking (Default)
- (23E001) Authorize unlock

When the gate is unlocked in an unauthorized way, the clutch gets locked automatically.

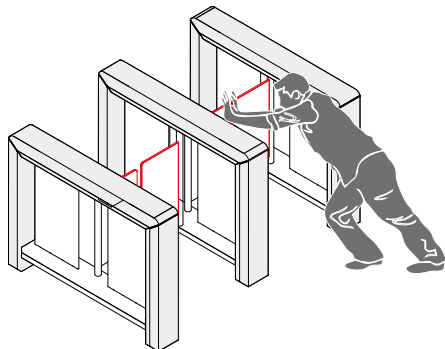

### **Restore Factory Settings (24EXXX)**


- (24E001) Restore factory settings

### **Anti-pinch Area Setting (25EXXX)**


It can be set as anti-pinch area, Anti-pinch in the channel or No anti-pinch at both ends of the channel.



Anti-pinch in the channel (Default)

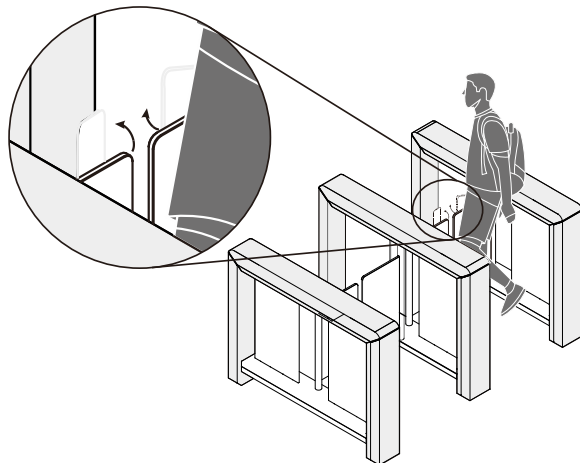


No anti-pinch at both ends of the channel

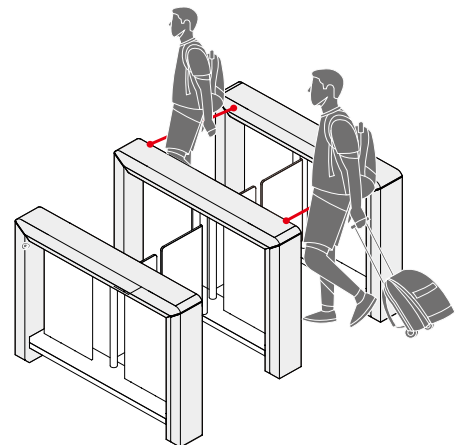
**False Direction Entry (26EXXX)**

- (26E000) Close gate
- (26E001) Alarm (Default)
- (26E002) Turn off this function

Close gate

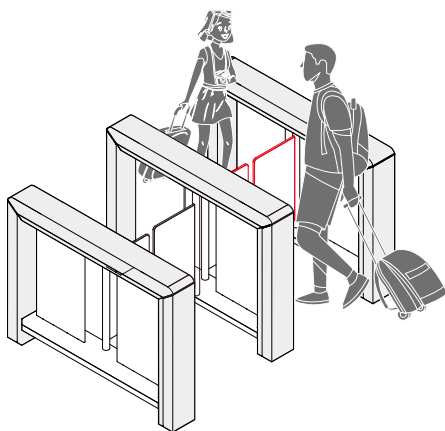

Alarm

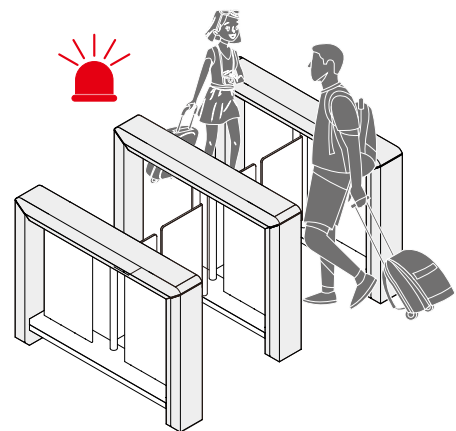


When the anti-pinch area is set to 1, this function is effective.


**Anti-tailgate Setting (27EXXX)**

- (27E000) Close gate
- (27E001) Alarm (Default)
- (27E002) Turn off this function

Close gate

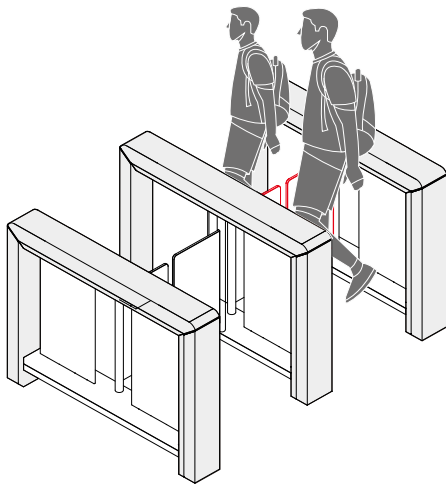

Alarm

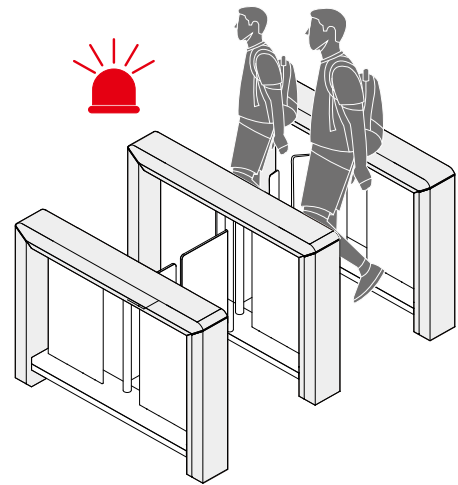

When the anti-pinch area is set to 1, this function is effective.

#### **Closing Position (28EXXX)**

- (28E000) Close the gate after pedestrians pass the last pair of infrared sensors (Default)
- (28E001) Close the gate after pedestrians pass the penultimate pair of infrared sensors

When the anti-pinch area is set to 1, pass the penultimate pair of infrared sensors is effective.

#### **Anti-pinch Action Setting (29EXXX)**

- (29E000) Barriers stop moving (Default)
- (29E001) Re-open
- (29E002) Turn off the anti-pinch

#### **Voice Switching (30EXXX)**

- (30E001) Alarm (Default)

#### **Motor Installation Direction (31EXXX)**

- (31E000) Inverted (Default)
- (31E001) Upright

**Note:** Private setting is invalid.


#### **Barrier Type (32EXXX)**

- (32E000) Ordinary barrier (default)
- (33E001) High barrier (reserved menu)

#### **Sync Adjustment (33EXXX)**





The larger the value, the slower the opening time of the master turnstile. The valid value for Sync Adjustment can be set between 0 to 30, and the default value is 12.
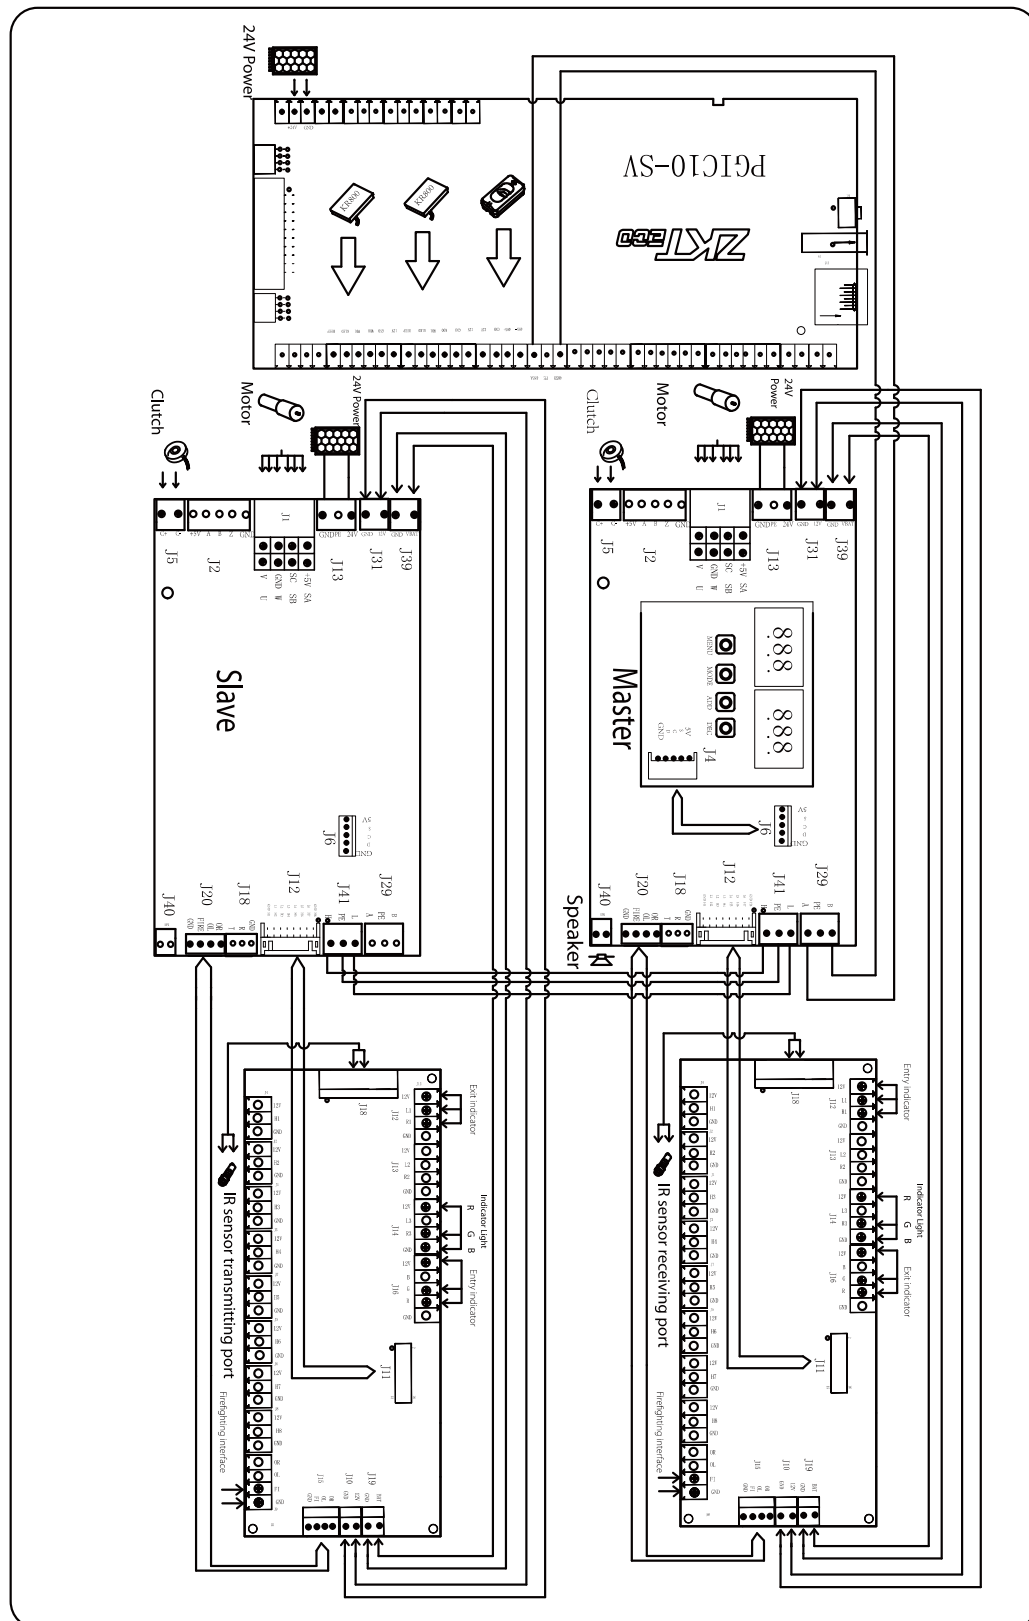
## 4 Wiring Diagram



## 5 Packing List

The package consists of the following items:

|   |                         |                      |
|---|-------------------------|----------------------|
|  | Mars-S1000              | 1 (master and slave) |
|  | Power cable             | 1                    |
|  | Card                    | 1                    |
|  | Expansion Screw M12*100 | 8                    |

## 6 Maintenance

### 6.1 Chassis Maintenance

The chassis is made up of stainless steel or cold rolled sheet. If it is used for substantial period, then there may be rust stains on its surface. Regularly clean the surface with a clean cloth carefully. Coat the surface with anti-rust oil and do not cover the infrared sensor.

### 6.2 Movement Maintenance

Switch off the power supply before maintenance. Open the door, clean surface dust, and apply lubricant for smooth movement.

### 6.3 Power Supply Maintenance

- Switch off the power supply before maintenance.
- Check the power plug connection, if found loose, fix it properly.
- Do not change any connection position randomly.
- Check the external power supply insulation periodically.
- Do periodic check for any kind of leakage.
- Check if the technical parameters of interface are normal.
- Check the service life of the electronic components and replace accordingly.

**Caution:** All the above-mentioned maintenance methods for swing barrier must be carried out by a professional technician, especially the movement and the electric control part. For ensuring operational safety, first switch off the power supply when the barrier is not in use.

## 7 Troubleshooting

| No. | Failure Description  | Cause and Solution  |
|-----|--|---|
| 1   | No response from direction indicator or indication is not correct.     | <b>Cause:</b> It may be due to the incorrect connection of indicator.<br><b>Solution:</b> Check whether the connection of the indicator is correct or not.  |
| 2   | After swiping the card, there exists only swing arm action.            | <b>Cause:</b> It may be due to the existing problem in the master and slave machine type setting.<br><b>Solution:</b> Check the master and slave machine type setting and the 5-core, 2-core connection line. |
| 3   | Delay in barrier opening or it doesn't close.                          | <b>Cause:</b> It may be due to the time of the barrier opening is set as too long.<br><b>Solution:</b> Check whether the time of the opening is too long, or the IR sensor is covered.                        |
| 4   | Motor doesn't rotate, the resistance is much, or the bearing is loose. | <b>Cause:</b> It may be due to the motor's rotation angle is not set properly.<br><b>Solution:</b> The motor works properly, but the rotated angle is not sufficient, so it may cause loosening of bearing.   |
| 5   | When powered ON, the swing doesn't return to the initial position.     | <b>Cause:</b> It may be due to the obstacle that lies in the sensing area.<br><b>Solution:</b> Ensure that no obstacle is in the sensing area, then restart the equipment.                                    |

ZKTeco Industrial Park, No. 32, Industrial Road,  
Tangxia Town, Dongguan, China.  
Phone : +86 769 - 82109991  
Fax : +86 755 - 89602394  
[www.zkteco.com](http://www.zkteco.com)

